


PRODUCT INFO SHEET

Nanmac Corporation

Quality • Performance • Solutions

Head Mount Transmitter Isolated F11-50 Series

The F11-50 is a universal, isolated two-wire transmitter. Used for temperature and other measurement applications, it combines competitive functionality and simple configuration. This device is also available with these special ratings: FM, ATEX, and HART communication. Contact us for your specific requirement. All user specified information is programmed by Nanmac.

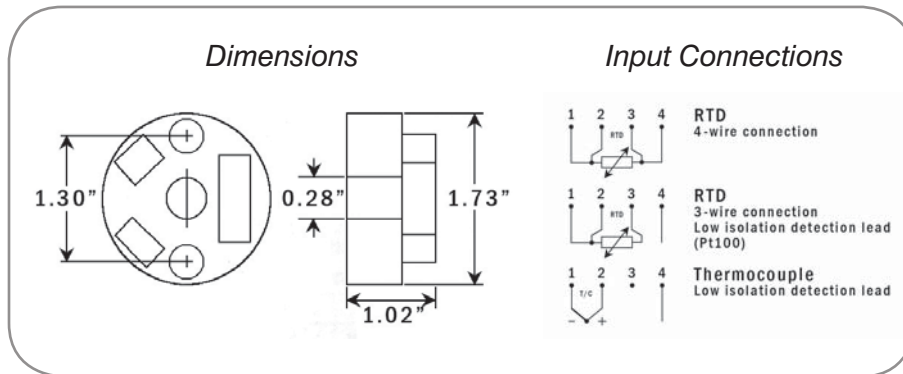

Special Ratings:

- For FM approved device, add suffix "FM" to the part number.
- For ATEX approved device, add suffix "ATEX" to the part number.
- For HART compatible communications device, add suffix "HART" to the part number.
- For FM or ATEX plus HART communication add suffix "FM" or "ATEX" plus "HART" to the part number.
Example: F11-50-FM-HART, or F11-50-ATEX-HART

Temperature Ranges and Specifications

Input RTD 3-,4-wire connection	Pt100 (a=0.00385)	-200 to 1000°C / -328 to 1832°F
	Pt1000 (a=0.00385)	-200 to 200°C / -328 to 392°F
	PtX10 $\leq X \leq 1000$ (a=0.00385)	Upper Range Depending on X-Value
	Pt100 (a=0.003902)	-200 to 1000°C / -328 to 1832°F
	Pt100 (a=0.003916)	-200 to 1000°C / -328 to 1832°F
	Ni100 (1) Ni1000 (1)	-60 to 250°C / -76 to 482°F -10 to 150°C / 14 to 302°F
Input Potentiometer Resistance	3-,4-wire connection, 0 - 2000 Ω	
Input Thermocouples	Types: B, C, E, J, K, N, R, S, T	
Input mV	-10 to 500 mV	
Sensor Failure	User Definable Output	
Adjustments - Zero	Any Value Within Range Limits	
Minimum Spans	100° either F or C	
Output	4-20 / 20-4 mA, Temperature Linear	
Operating Temperature	-40 to 85°C / -40 to 185°F	
Galvanic Isolation	1500 VAC, 1 min.	
Power Supply	F11-50: 6.5 to 36 VDC F11-50-FM: 8 to 30 VDC F11-50-ATEX: 8 to 30 VDC	
Intrinsic Satety	ATEX: II (1) G [EEx ia] IIC T4-T6 FM: Class I-III, Div. 1, Gr. A-G	
Typical Accuracy	$\pm 0.1\%$ of Temperature Span	
Connection Head	DIN B or Larger	

User Specified Information (programmed by NANMAC)

- 1) Input Sensor Type
- 2) Cold Junction (thermocouple only, default is 32°F / 0°C)
- 3) Temperature Scale °F or °C
- 4) Temperature Range (full sensor range as default)
- 5) Sensor Break Detection (upscale or downscale - upscale is default)

11 Mayhew Street
Framingham, MA 01702
www.Nanmac.com
engineering@nanmac.com

Foremost in Temperature Measurement™
NANMAC

US & Canada: 1.800.786.4669
International: 1.508.872.4811
Fax: 1.508.879.5450
info@nanmac.com